

**Recommended Parts List for PM308**

=====

Ref.	Parts No.	FROMMM No.	Description	QTY
1	T6-1-31120	PM3.2228	Upper Cutter	1
2	T6-1-32130	PM3.2237	Lower Cutter	1
3	T6-1-32150	PM3.2239	LH & Center Block Spring	2
4	T6-1-41000	PM3.2253	Heater Ass'y	1
5	T6-1-60130	PM3.2267	Tension Adjusting Arm Spring	2
6	T6-1-22110	PM3.2213	Strap Guide Spring	2
7	T6-2-11150	PM3.2402	RH Bandway Flap Spring	5
8	T6-2-12150	PM3.2442	LH Bandway Flap Spring	5
9	T6-1-72140	PM3.2350	Spring	1
10	T6-6-10360	PM3.2738	Limit Switch (LS1-3)	3
11	T6-6-30031	PM3.2824	Fuse (2A)	5
12	T6-6-30032	PM3.2825	Fuse (3A)	5
13	T6-6-30033	PM3.2827	Fuse (5A) (220V,230V,240V)	5
14	T6-6-30034	PM3.2829	Fuse (7A) (220V,230V,240V)	5
15	T6-6-30036	PM3.2831	Fuse (1A)	2
16	T6-6-30040	PM3.2835	P.C. Board	1
TOTAL:				<u>46 PCS</u>

**Additional recommended Parts List for PM308**

=====

Ref.	Parts No.	FROMMM No.	Description	QTY
1	BR628ZZ	PM3.2232	Bearing, 628ZZ	1
2	T6-1-62000	PM3.2274	Tension Jaw Ass'y	1
3	T6-4-20180	PM3.2584	Brake Tension Arm Spring	1
4	T6-6-10380	PM3.2740	Limit Switch (LS-4)	1
TOTAL:				<u>4 PCS</u>